



**5-Button
Transmitter**

Standard Features:

Status indicator (green LED)
Valet / override switch
Multi-tone siren
Dual stage impact detector
Remote panic
Remote chirp mute
Remote sensor/trigger bypass
Passive or active arming

Optional Features:

Flashing parking lights
Starter disable
Keyless entry
Remote trunk or hatch release
Illuminated entry
Hood and trunk protection
Remote auto start
Power window roll up
Back-up battery w/charging circuit
Glass break sensor
Plug-in radar sensor

Note: *Some features may require additional parts and labor, and may not be appropriate for certain vehicles. Consult your authorized dealer.*

System Operation

ARMING OPERATION

To arm the system press transmitter button 1:

- The siren will chirp once.
- The parking lights will flash once.*
- The doors will lock.*
- The LED will turn solid for 10 seconds then start flashing slowly. After 10 seconds the system is armed.

After Arming, if the system detects a bad sensor or an open zone, the siren will chirp 4 times to indicate a zone is open. The system will ignore that input, but keep all other areas protected.

While the system is Armed, the system will trigger if:

- The doors are opened.
- The shock sensor detects an impact to the vehicle.
- An optional sensor is disturbed.
- The hood or trunk is opened.

When triggered, the siren will sound, the horn will honk, and the parking lights will flash. If the system is triggered by the ignition, doors, hood, or trunk, the system will alarm for 30 seconds.

If the same input triggers the system 4 times during a single arming cycle, the system will bypass that input, keeping the other zones protected, until the next time the system is armed.

If the shock sensor detects a light impact to the car or the radar sensor detects an exterior zone disturbance, the system will sound 5 chirps to warn away the potential intruder.

*Optional Feature

PASSIVE ARMING

The passive arming feature allows the system to arm automatically without user intervention. *This programmable feature may be enabled during installation.*

To arm the system passively:

1. Turn the ignition key off.†
2. Exit the vehicle and close all doors.
 - The LED flashes rapidly indicating that the system is preparing to arm. (The system can be armed at any time by pressing transmitter button 1.)
 - The siren will chirp 30 seconds after the last door is closed to indicate the system is now armed.
 - The doors will lock.†*

† The ignition must have been on for at least 5 seconds prior to exiting the vehicle or Passive Arming will be bypassed.

† If the Passive Locking feature was enabled during installation.

DISARMING OPERATION

To disarm the system press transmitter button 2.

- The siren will chirp twice.
- The parking lights will flash twice.*
- The doors will unlock.†*
- The dome light will turn on for 30 seconds.*

† If the Passenger Unlock Feature is installed, pressing the unlock button will unlock only the driver's door. Pressing the unlock button again unlocks all doors.

* Optional feature

TAMPER ALERT

If the alarm was triggered while away from the vehicle, the siren will chirp 3 times and the parking lights will flash 3 times on disarming for tamper indication. After disarming the alarm, enter vehicle and turn ignition on. The LED will flash the zone that was triggered 5 times (see LED TAMPER ALERT INDICATIONS).

AUTO REARM

The Auto Rearm feature allows the system to automatically re-arm itself in the event the system is disarmed and a door is not opened within 30 seconds. *This programmable feature may be disabled during installation. The Passive Arming feature and Auto Rearm feature are related. In order to disable the Auto Rearm feature, the Passive Arming feature must also be disabled during installation.*

NOTE: *This feature will not work on vehicles with the illuminated entry feature enabled.*

SILENT ARMING/DISARMING

Press transmitter button 5 (the Shift Button) then the Arm or Disarm button for one-time silent operation. The system can also be programmed for full-time silent operation during installation.

CHIRP DELETE

For full time silent operation, the ARM/ DISARM chirps can be permanently disabled. *This feature must be programmed during installation.*

IGNITION LOCK*

The ignition locking feature allows the doors to automatically lock 3 seconds after the ignition key is turned on, and automatically unlock when the ignition key is turned off. *This feature may be disabled during installation.*

*Optional feature

REMOTE PANIC

In the event of an emergency (PANIC) situation, the system's siren can be triggered for 30 seconds to attract attention. To activate the Panic Feature, press transmitter button 1 for 3 seconds:

- The siren will sound.
- The parking lights will flash*.

Press button 1 to exit panic mode and rearm the system. Press button 2 to exit panic mode and disarm the system. The Panic Feature will operate when the ignition is on.

*Optional feature

EMERGENCY OVERRIDE

If the transmitter becomes lost or fails to operate, the system can be disarmed by using the emergency override feature.

To override the system:

1. Enter the vehicle.
 - Because the system is armed, the siren will sound.
2. Turn on the ignition key.
3. Press the Valet switch for 3 seconds.
 - The siren will stop sounding.
 - Starter defeat bypassed.

OPTIONAL SECURE OVERRIDE CODE

For a higher level of security, the system may be programmed to override only when a personal code is entered through the valet switch.

To disarm the system using a personal override code please follow steps 1 and 2 above, then see step 3 below:

3. Press the override switch the number of times equal to the disarm code and hold for 10 seconds on the last press.

SETTING A SECURE OVERRIDE CODE

NOTE: Setting a Secure Override Code requires entering the programming mode so follow the directions carefully.

To set a Secure Override Code:

1. Turn the ignition key on.
2. Within 5 seconds, press valet switch 5 times.

- The siren will chirp 3 times, indicating that you have entered Programming.
3. Press the valet switch 3 times.
 - The siren will chirp each time the valet switch is pressed.
 4. Within 5 seconds, press transmitter button 3.
 - The siren will chirp 3 times indicating it is ready for the new override code.
 5. Press the valet switch the number of times equal to the desired code (from 1-15).
 6. Turn off the ignition then arm the system.
 7. Disarm the system using the Secure Override Code to permanently store the new code.

VALET MODE

When the system is placed into the Valet Mode the security system will be disabled. However, the optional keyless entry and trunk release features will still function if installed.

To enter the Valet Mode:

1. Be sure the system is disarmed.
2. Turn the ignition key on.
3. Press and hold the valet/service mode switch for 3 seconds.
 - The siren will chirp once.
 - The LED will turn on solid indicating the system is in Valet Mode.

To exit Valet Mode:

1. Turn the ignition key on.
2. Press and hold the valet/service mode switch for 3 seconds.
 - The LED will turn off.
 - The Siren will chirp 2 times.

OPTIONAL TRUNK RELEASE

Press button 3 for approximately 2 seconds to open the trunk.

OPTIONAL TRUNK DISARM

The trunk disarm feature allows the alarm to disarm automatically whenever transmitter button 3 is used to activate the optional trunk release. This eliminates having to first disarm the alarm before activating the trunk release. *This feature must be programmed during installation.*

VEHICLE LOCATOR FEATURE

To aid in locating the vehicle in crowded parking lots, the Vehicle Locator feature can be accessed by pressing the Shift button then button 4. The siren will chirp 5 times and the parking lights will flash 5 times.

REMOTE SENSOR BYPASS

To arm the system and bypass the shock sensor, press button 1 to arm, then within 2 seconds press button 1 again. The siren will chirp 5 times and sensors will be ignored until the system is disarmed and rearmed.

TRANSMITTER FUNCTIONS

Button 1 Arm; press 3 seconds for panic
Button 2 Disarm; press twice for optional Passenger Unlock feature
Button 3 Auxiliary function 1
Button 4 Auxiliary function 2

Transmitter Functions with Shift Key (Button 5) pressed 1 time:

Button 1 Silent Arm
Button 2 Silent Disarm
Button 3 Auxiliary function 3
Button 4 Car Locator feature

Transmitter Functions with Shift Key (Button 5) pressed 2 times:

Button 1 Arm car 2; press 3 seconds for panic
Button 2 Disarm car 2; press twice for optional Passenger Unlock feature
Button 3 Auxiliary function 1 for car 2
Button 4 Auxiliary function 2 for car 2

OPTIONAL FEATURES

Some features and options may require additional parts and/or labor, and may not be appropriate for certain vehicles.

- Dome light illumination
- Horn honk
- Dual stage unlock
- Remote Autostart
- Power window roll-up

STATUS INDICATOR (LED) FUNCTIONS

On Solid = Valet Mode
Slow Flash = System Armed
Rapid Flash = Passive Arming

LED TAMPER ALERT INDICATIONS

(after turning on ignition)
1 Flash = optional sensor
2 Flashes = shock sensor
4 Flashes = door
5 Flashes = hood or trunk
Example: flash-flash-pause-flash-flash-pause = shock sensor

PARKING LIGHT INDICATIONS

1 Flash = System Armed
2 Flashes = System Disarmed
3 Flashes = Open Zone
Indication (after arming)
4 Flashes = Tamper Alert
On Solid = System Disarmed
(optional programming for 30 second output on disarm)